SpeakerMagic Quick Launch

Following are the steps to be followed once the installation is complete.

Open Windows Media Player and follow the below given steps to enable Speaker Magic.

Step1:

Step2:
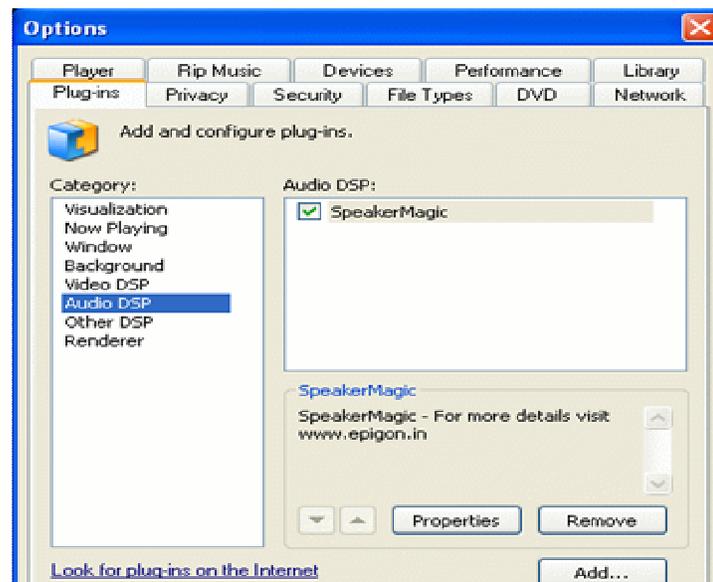
Step3:

Click on Properties to get windows as shown below
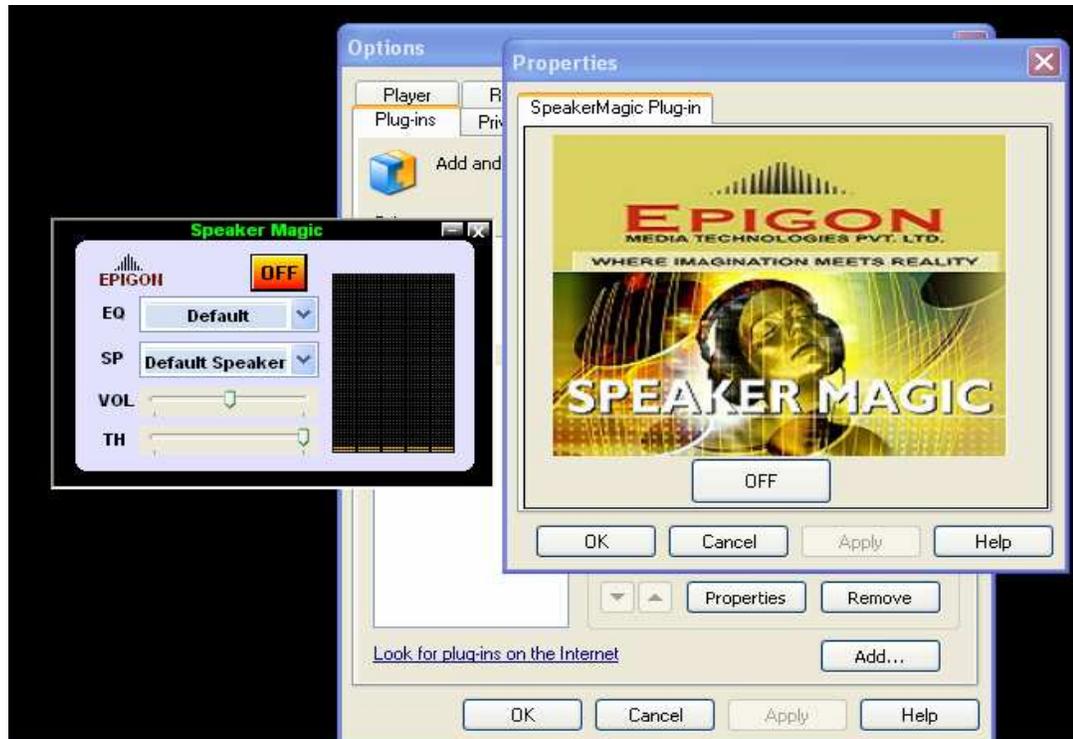
Step4:

Press OK and close the window.

Step5:

Now play the song.

You will get Speaker Magic control panel window on your screen.

Components:

Power ON/OFF

Speaker Magic can be switched ON/OFF by using this switch (Status OFF indicates Speaker Magic is currently ON).

Speaker Type

High quality music by selecting the proper speaker type (Default (Speakers without Woofer), Small (Laptop or Head Phone), Big Speaker (Speakers with Woofer)).

Default Setting -Default Speaker

Presets Type

8 Presets according to the taste of the music listener (Rock, Dance, Classical, Reggae, Jazz, Folk, Speech, Loud)

Default Setting -Default ("EQ" is off)

Threshold

Threshold can be adjusted according to the speaker used to get a low magnitude signal. To get maximum effect move the slider towards the extreme right.

Default Setting-Max Position.

Volume
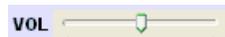
Mid Position indicates the original volume, move the slider towards extreme right to get the maximum digital amplification that can be achieved by Speaker Magic without any saturation issues.

Default Setting-Mid Position.

Spectrum Analyzer
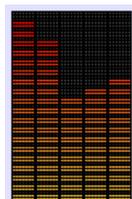
Spectrum Analyzer is a useful tool to indicate the actual frequencies and their strength.